

RICARDO

SLICER & GRATER ATTACHMENT

user care and instruction manual



Thank you for purchasing the **RICARDO** Slicer & Grater Attachment.
Before using this product, please read the user care and instruction manual carefully.

IMPORTANT SAFEGUARDS

.....

When using electrical appliances, basic safety precautions should always be followed to prevent fire, electric shock, serious personal injury and/or property damage, including the following:

READ ALL INSTRUCTIONS CAREFULLY BEFORE FIRST USE.


- ::: Before use, also read the Important Safeguards section included in the **RICARDO** Digital Stand Mixer user care and instruction manual.
- ::: Do not plug the stand mixer into an electrical outlet until the attachment has been assembled according to the instructions.
- ::: **CAUTION** Blades are sharp. Handle carefully.
- ::: This attachment is not a toy and should not be used by children. Keep the stand mixer, its cord and the attachment out of the reach of children and pets. Close adult supervision is necessary when any appliance is used near children.
- ::: Avoid contact with moving parts. Keep hands, hair, clothing or utensils away from the attachment, the blades or moving parts while it is in operation to reduce the risk of severe injury to persons and/or damage to the attachment or the appliance.
- ::: Never feed food by hand. Always use the food pusher.
- ::: If food becomes lodged in any blade or the feed tube, stop the motor from running and unplug the appliance. Wait for the moving parts to stop and disassemble the attachment to remove the remaining food.
- ::: Never use fingers to scrape food away from the drums and the discharge opening while the appliance is in operation as this may cause serious injury.
- ::: Do not use more than one attachment at a time.
- ::: Do not use the attachment for anything other than its intended use. Do not use attachments or accessories that are not recommended or sold by the manufacturer.
- ::: Unplug to turn off the appliance before assembling or disassembling the attachment and before cleaning.
- ::: Remove attachment from the appliance before cleaning.

SAVE THESE INSTRUCTIONS - FOR HOUSEHOLD USE ONLY

PARTS IDENTIFICATION

.....

Product may vary slightly from diagram.

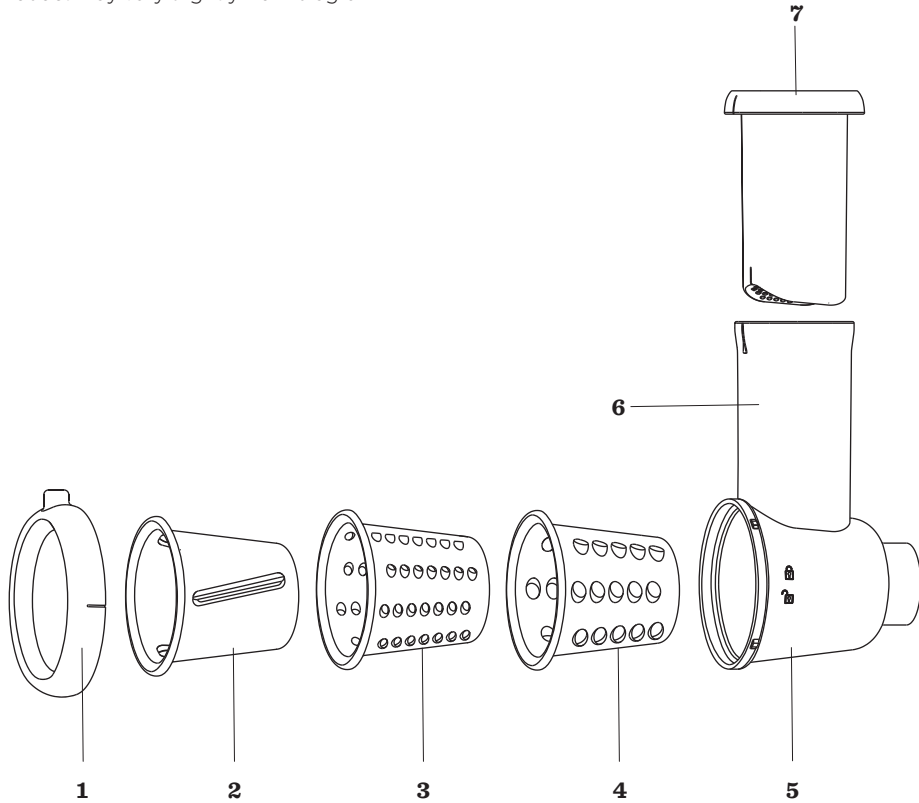

- 1.** Locking collar
- 2.** Slicing drum
- 3.** Fine grating drum
- 4.** Coarse grating drum
- 5.** Attachment housing
- 6.** Feed tube
- 7.** Food pusher

BEFORE FIRST USE

.....


- 1- Read all instructions and important safeguards.
- 2- Remove all packaging materials and ensure that all parts have been received in good condition.
- 3- Tear up all plastic bags as they can pose a risk to children.
- 4- Do not plug the appliance into an electrical outlet before it is ready to be used.
- 5- Wash all parts (slicing, fine grating & the coarse grating drums, the food pusher, the main housing and the locking collar) in hot soapy water or in the dishwasher and dry thoroughly.

NOTE: Do not use abrasive cleaners or scouring pads or any other object that could scratch.


ASSEMBLING

.....

ASSEMBLING THE ATTACHMENT

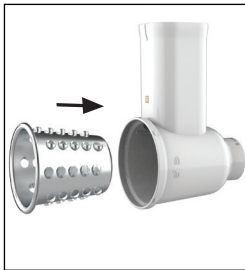


CAUTION Blades are sharp. Handle with care. Insert the desired drum into the housing making sure to align the slots of the drum with the tabs inside the housing.

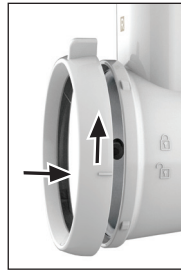

Place the locking collar on the main housing aligning the line engraved on the collar with the unlock icon  on the right side of the housing. Turn the collar counterclockwise to lock it in place. A click is heard when the collar is safely locked.

REMOVING THE DRUM

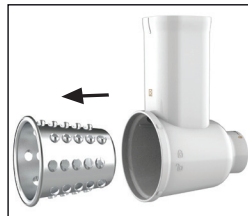

Turn the locking collar clockwise to unlock and remove. Safely slide the drum outside of the housing.


CAUTION Blades are sharp. Handle with care.


ASSEMBLING THE ATTACHMENT TO THE DIGITAL STAND MIXER

The Slicer & Grater connects to the front attachment port of the **RICARDO** digital stand mixer.



Unplug the appliance. Pull out the cover of the front attachment port.

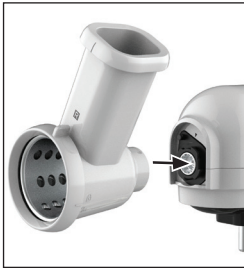

Align the unlock icon  printed on the back housing with the arrow on the stand mixer, then push straight firmly to insert the attachment shaft into the front attachment port.



Holding the feed tube housing, turn attachment counterclockwise to lock it in place. A click will be heard when the attachment locks into place.

NOTE: It is important to make sure the attachment is locked onto the stand mixer. Before using, test lock by attempting to turn the attachment to the right.

REMOVING THE ATTACHMENT FROM THE DIGITAL STAND MIXER



Unplug the appliance. Press on the black release button to unlock the attachment from the stand mixer, then holding the feed tube housing, turn attachment clockwise and pull it out to remove.




Put the cover back on the front attachment port by inserting first the bottom of the cover into the compartment. Then, simply push the cover into place.

BLADE GUIDE

DRUMS	SUGGESTED USES	SPEED
<p>Slicing Drum</p> 	<p>Perfect for soup vegetables (carrot, parsnip, celery) or toast (cucumber, zucchini). Ideal for slicing dry sausages for pizza toppings or a charcuterie platter. Beets Zucchini</p>	2, 3 or 4
<p>Fine Grating or Coarse Grating Drum</p>  	<p>Cucumber, zucchini, cabbage, carrots, potatoes, squash, cheese Cold butter (for incorporating into a pie crust recipe) Chocolate (to decorate or garnish a cake)</p>	2, 3 or 4

USING THE SLICER & GRATER ATTACHMENT

- 1- Place the appliance on a flat, dry, stable and heat-resistant surface.
- 2- With the appliance unplugged, assembled the attachment onto the **RICARDO** digital stand mixer according to the ASSEMBLING section. Ensure all parts are attached properly and locked in place before operating.
- 3- Cut food into small pieces or strips to fit into the feed tube.
- 4- Plug the power cord into a 120V AC wall outlet to turn the appliance on. Appliance will beep and display will show 0 / 00:00.
- 5- Press + or - buttons to set desired speed. Speed 2, 3 or 4 are recommended to slice or grate food.
- 6- Press twice on  button to start.

7- Feed cut food into the feed tube using the food pusher.




NOTE : The food pusher is asymmetrical and must be inserted in a specific way inside the feed tube. For proper use, insert the food pusher into the feed tube making sure to align the line engraved on the pusher with the line engraved on top of the feed tube on the main housing. If the pusher is inserted in a wrong way, it will create resistance with the interior of the feed tube, making it difficult to properly push the food down and remove the pusher thereafter.

8- Anytime during use, press on  button to stop.

WARNING

- ::: Never feed food into the feed tube by hand. Always use the food pusher.
- ::: Keep fingers out of openings (feed tube and discharge opening).
- ::: Keep away from children.
- ::: Failure to do so can result in amputation or cuts.

NOTE

- ::: For best results, feed only one item at a time into the feed tube (ex. carrot).
- ::: If food becomes lodged in the drum or the feed tube, press on  button to stop the motor from running and unplug the appliance. Wait until the moving parts have stopped rotating and disassemble the attachment to remove the remaining food.

CLEANING

.....

IMPORTANT: Unplug the appliance and ensure that moving parts have stopped rotating before handling or cleaning.

- ::: Remove the attachment from the stand mixer and disassemble the drum following the ASSEMBLING section. Wash all parts in hot soapy water or in the dishwasher and dry thoroughly.

NOTE

- ::: For best cleaning, rinse blades immediately after use.
 - ::: Do not use abrasive cleaners or scouring pads or any other object that can scratch the surface.
-

If you have any questions regarding this product, please contact our customer service:

- ::: by e-mail: kitchenproducts@ricardocuisine.com
- ::: by phone: 1-866-226-9222



Traditional Coleslaw

PREPARATION 20 minutes

REFRIGERATION 1 hour

MAKES 6 cups (1.5 litres)

¼ cup (60 ml) white vinegar
¼ cup (60 ml) vegetable oil
1 tsp sugar
½ tsp onion salt
½ tsp garlic powder
6 cups (510 g) shredded cabbage (see note)
1 cup (110 g) thinly shredded carrots (see note)

In a bowl, whisk together the vinegar, oil, sugar, onion salt and garlic powder until the sugar dissolves. Season with salt and pepper. Stir in the cabbage and carrots. Mix well. Cover and refrigerate for 1 hour before serving to allow all flavours to blend.

| NOTE | Using the grater attachment on the stand mixer will save you time. Use the coarse grating drum for the cabbage and the fine grating drum for the carrots.