



## PARKING BRAKE LEVER ON-VEHICLE INSPECTION

BR1CG-01

### 1. CHECK THAT PARKING BRAKE LEVER TRAVEL IS CORRECT

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44.1 lbf):  
7 - 9 clicks**

If incorrect, adjust the parking brake.

### 2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment (See page [BR-42](#)).

- (a) Remove the rear console box.
- (b) Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
- (c) Tighten the lock nut.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)**

- (d) Install the rear console box.