



Front and Rear Sway Bar Installation Instructions

Covers Part #9595

Kit contents:

- Sway bars
- Red color band, 3.0mm (stiff)
- Green color band, 2.8mm (stiff)
- Yellow color band, 2.6mm (intermediate)
- Black color band, 2.4mm (intermediate)
- Blue color band, 2.2mm (soft)
- White color band, 2.0mm (soft)
- Front linkage* (2)
- Rear linkage* (2)
- Sway bar mounts (2)
- Collars (2)
- 2.5x10mm BCS (8)
- 3x4mm GS (with threadlock) (6)
- 3x4mm GS (4)
- 3x18 mm CS (2) **Note: Front only. Reuse the factory installed 3x25 mm CCS used in the rear arm mud guards (Fig. 3).**

Tools required:

- 1.5mm hex wrench
- 2.0mm hex wrench
- 2.5mm hex wrench

	Front Sway Bar	Rear Sway Bar
Reduce Understeer	Soften	Stiffen
Reduce Oversteer	Stiffen	Soften
Smoother / High Grip	Stiffen	Stiffen
Rougher / Lower Grip	Soften	Soften
Severe Terrain	Remove	Remove

*The RF (right front)/LR (left rear) or LF (left front)/RR (right rear) molded on the link indicates that this link is to be installed only in those locations on the vehicle (see Fig. 4).


If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

FIG. 1 SWAY BAR INSTALLATION

Front installation shown. Rear installation is similar.

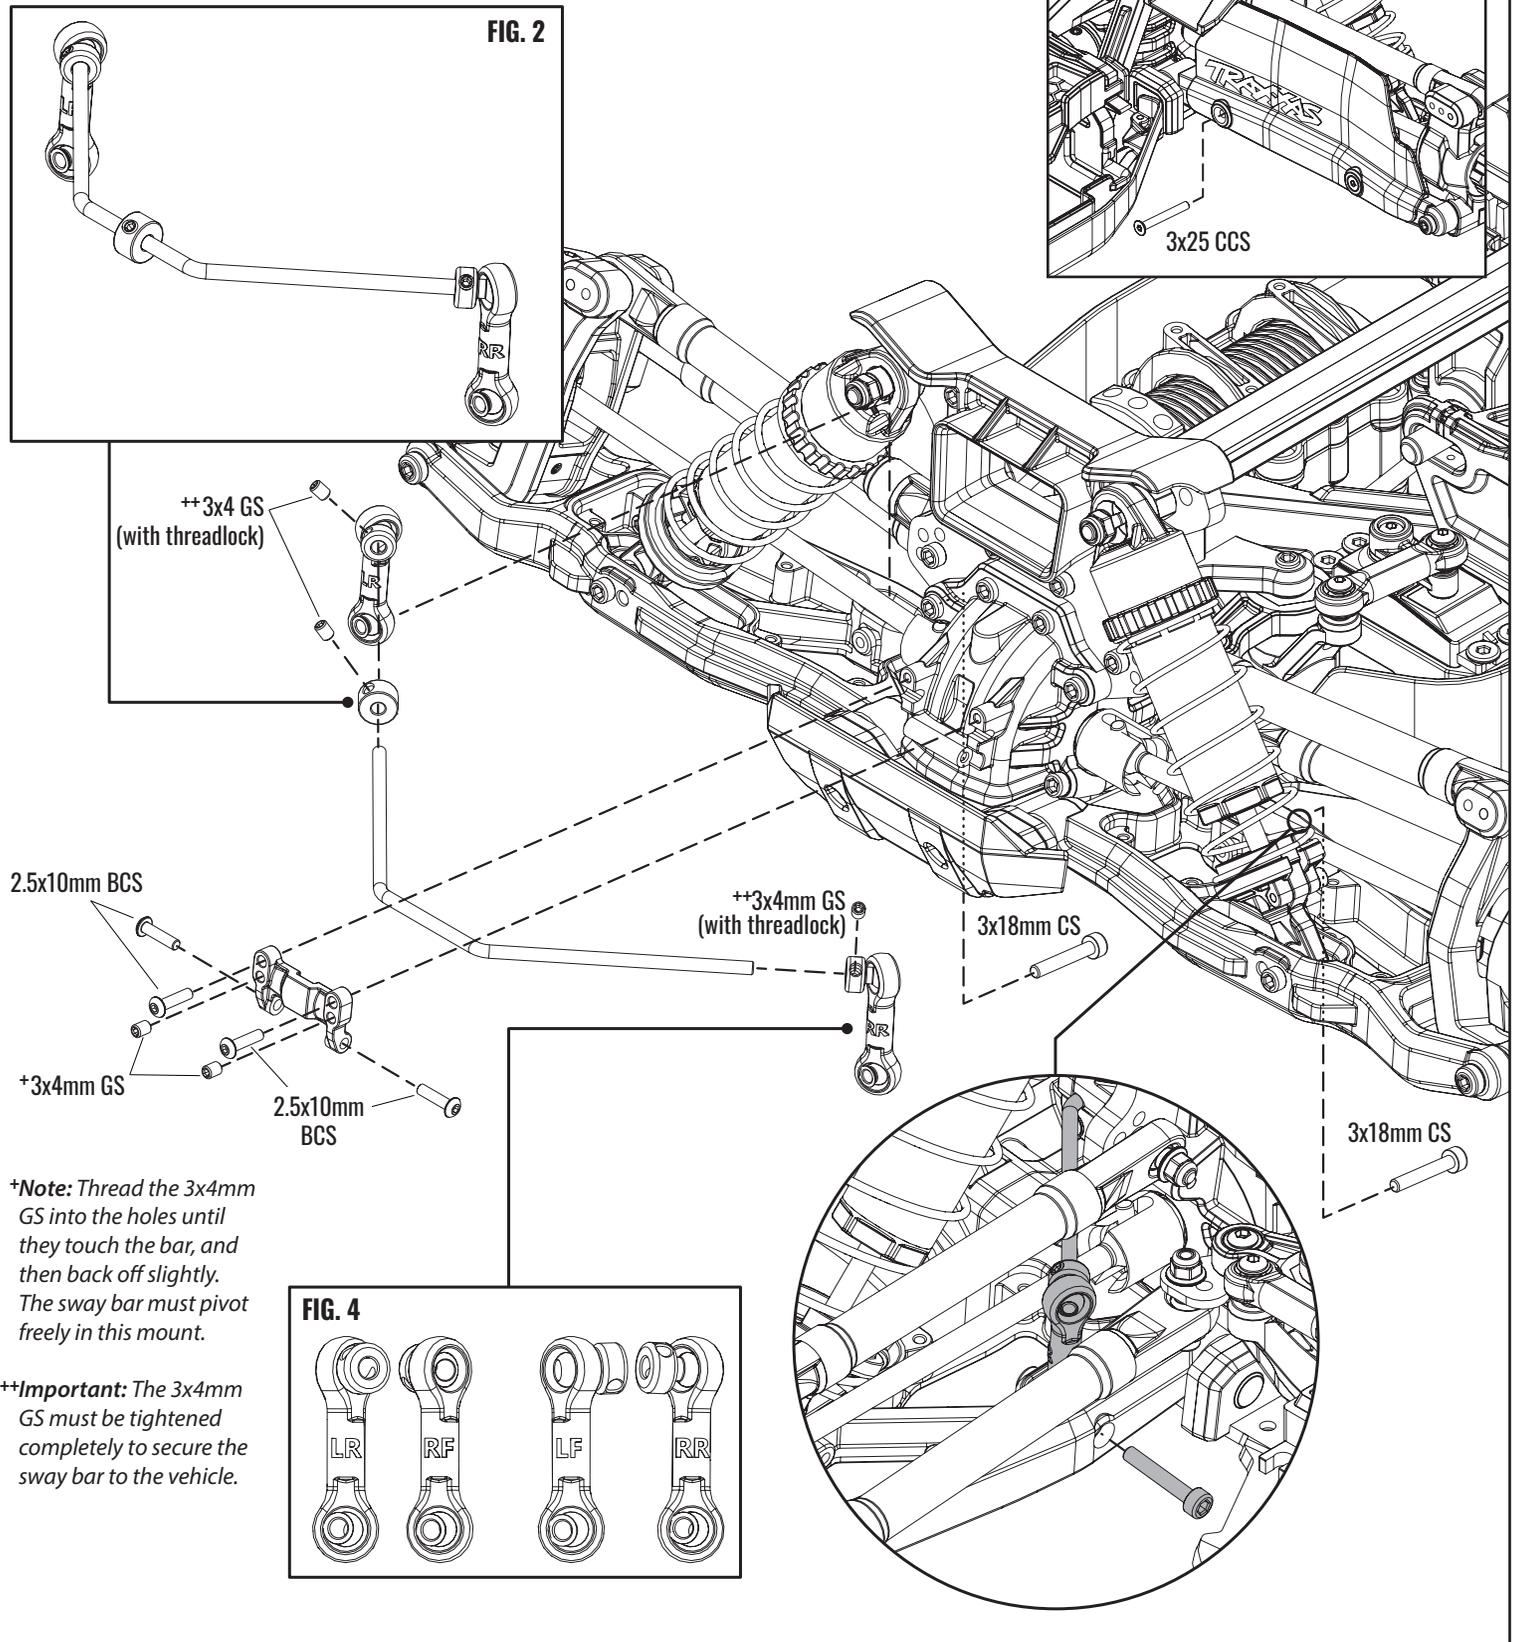

***Note:** Thread the 3x4mm GS into the holes until they touch the bar, and then back off slightly. The sway bar must pivot freely in this mount.

++Important: The 3x4mm GS must be tightened completely to secure the sway bar to the vehicle.