

COMPASS STEERING LINES INSTRUCTIONS

At the top of the steering handle there are two holes (red dots). Weave the line through the two holes and tie a knot. The lines should remain outside, and the knots should be underneath the steering handle on the inside. Next bolt, down the steering handle.



Take a rag with WD-40 and run it through the lines for easier installation.



Fold the line over on itself, just at the tip. This will allow the air compressor to be more effective.




Use an air compressor to push the lines through the internal tubes and out of the stern.




The lines should sit inside the perimeter channel of the steering handle.




Tie the lines around a tool and tug firmly on the line. This will stretch the lines and remove the slack.

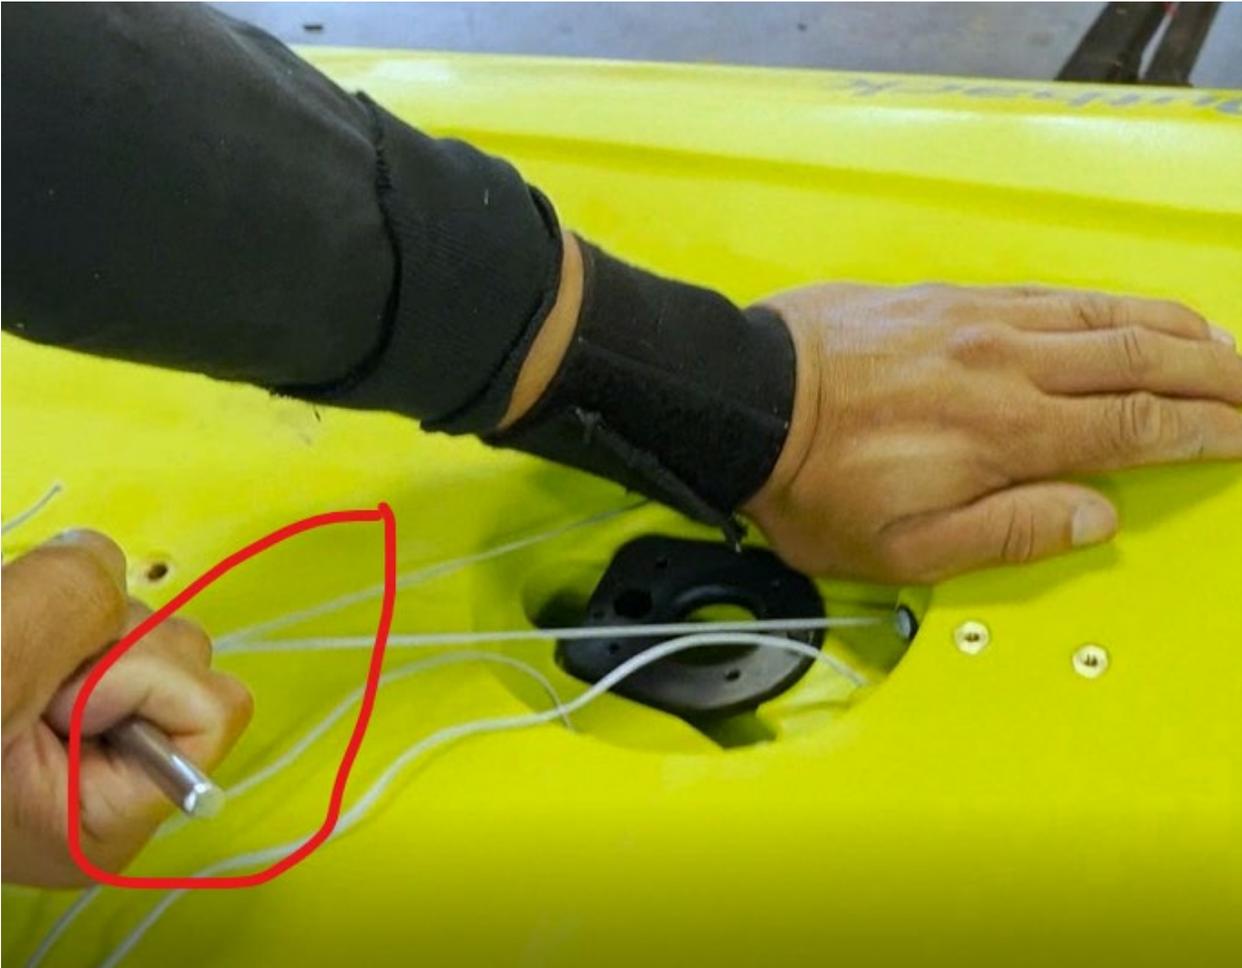


Weave the left line to the right of the drum and the left line to the right of the drum (as seen below).

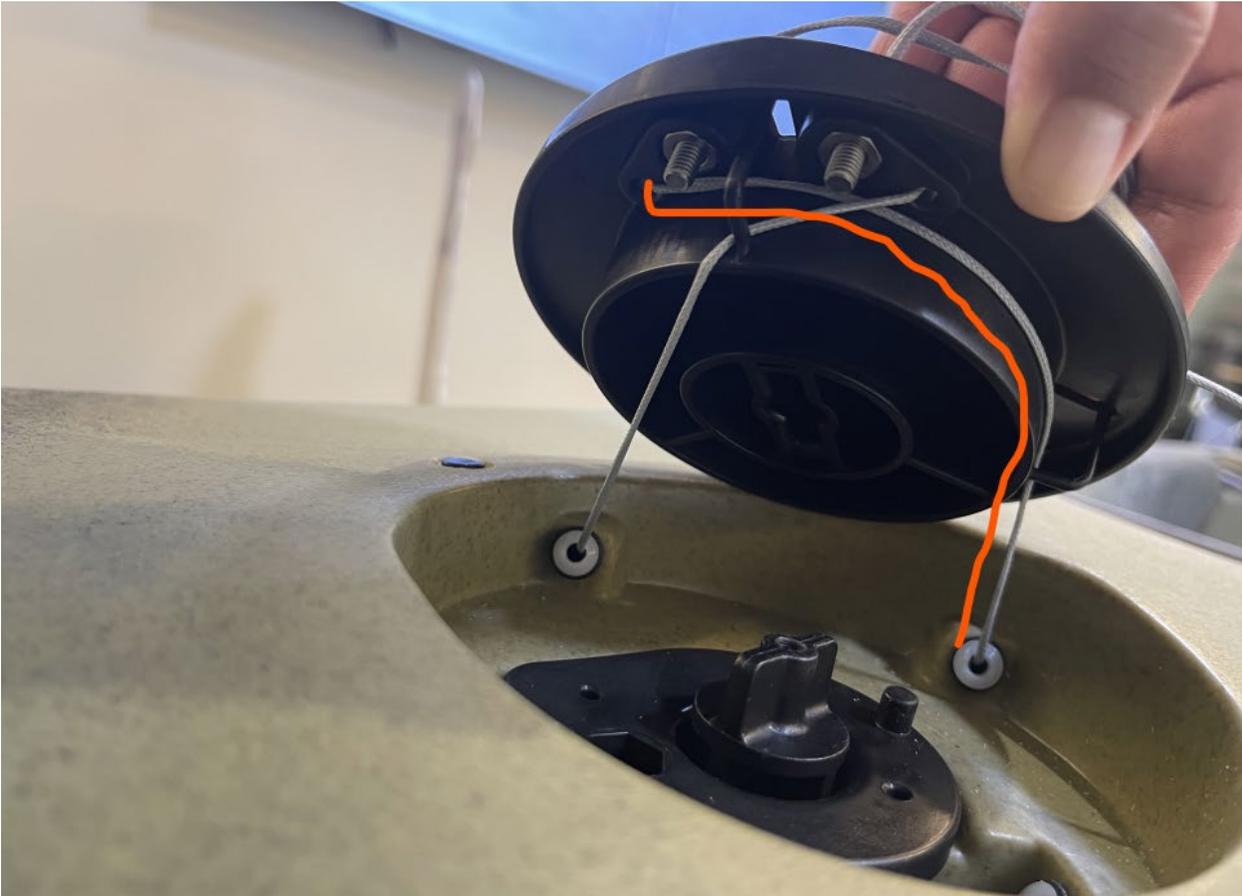

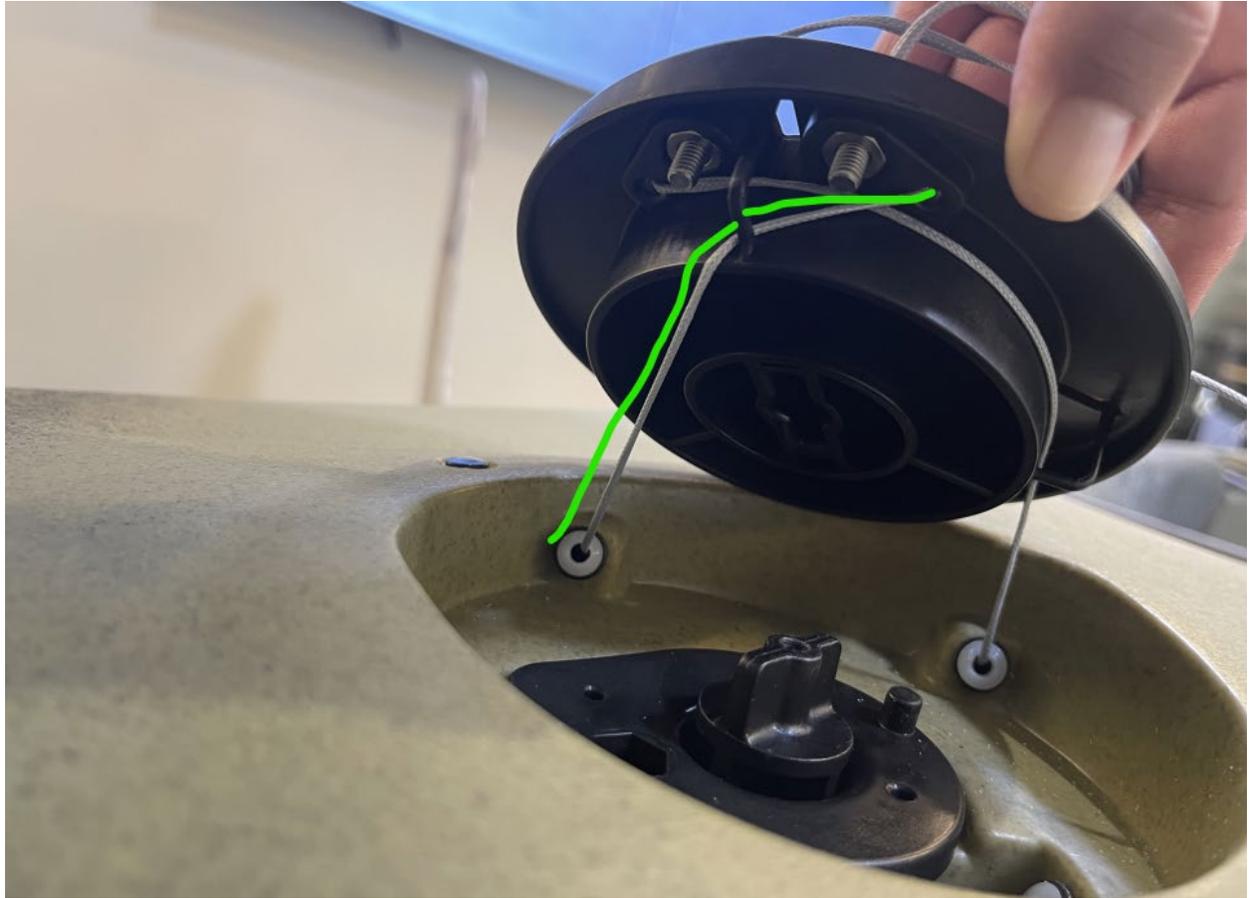

Once the lines are woven through the drum, screw the rudder drum into the rudder housing (the screw in the middle of the drum).

Next, tension the lines and clamp them down.

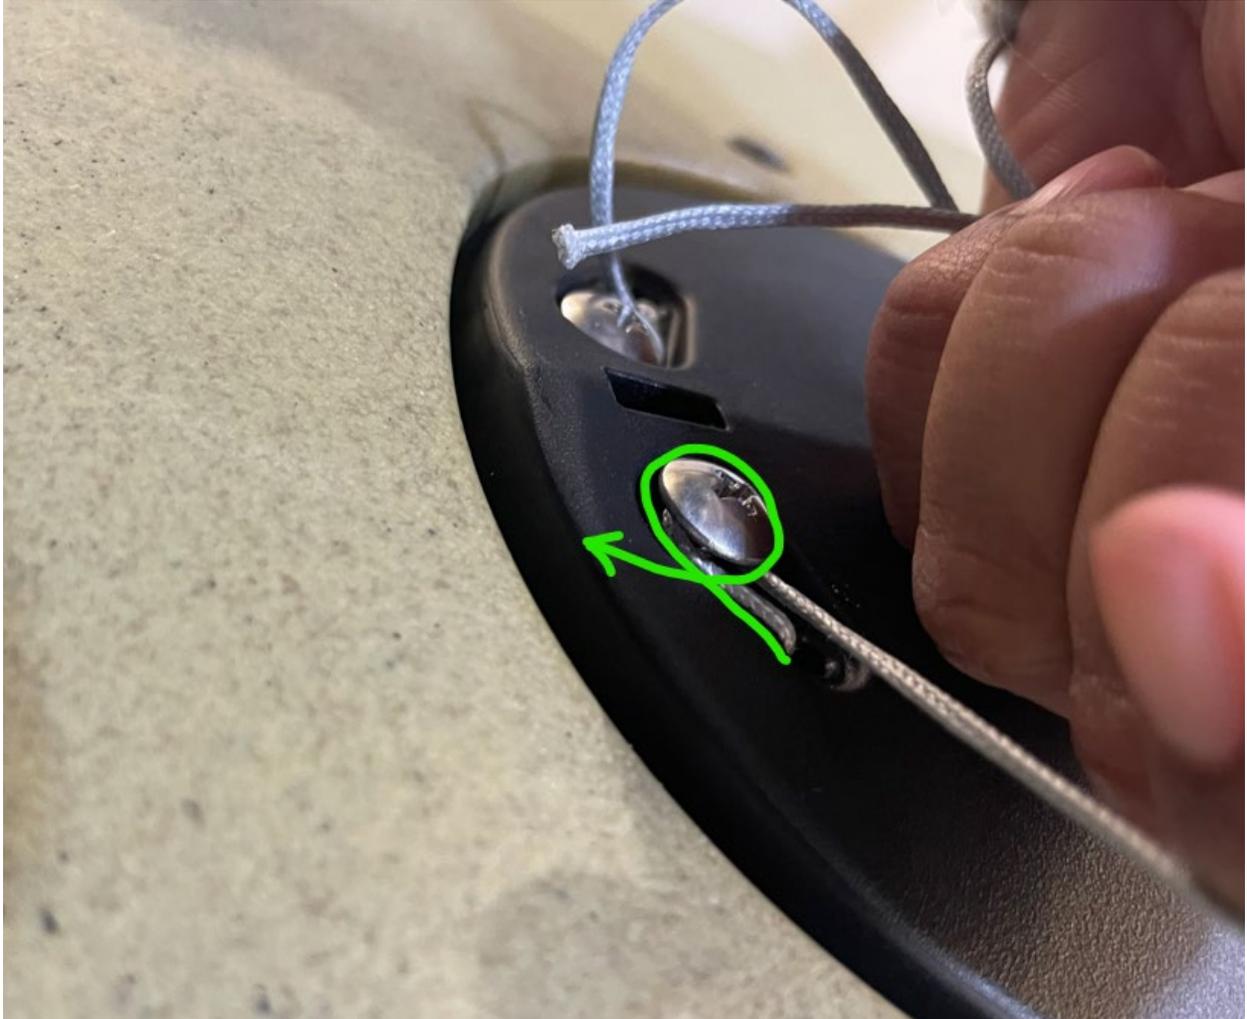

Finally, feed the line through the hole in the center of the drum.



Please let me know if you have any questions.

WARRANTY@HOBIE.COM