


A.C. COMPRESSOR MOUNT 100L

Small Block Chevy - Short Water Pump
Driver's Side

Note:

Install bolts into the water pump first.
Then determine the number of spacer
washers needed between the bracket
and intake manifold. This will vary with
the thickness of the various brands of
manifolds. **START ALL MOUNTING BOLTS
BEFORE TIGHTENING.**

We use a belt length of 54 to 55" with this
mount on installations in our shop.
However; this can vary with the diameter
of your pulleys.

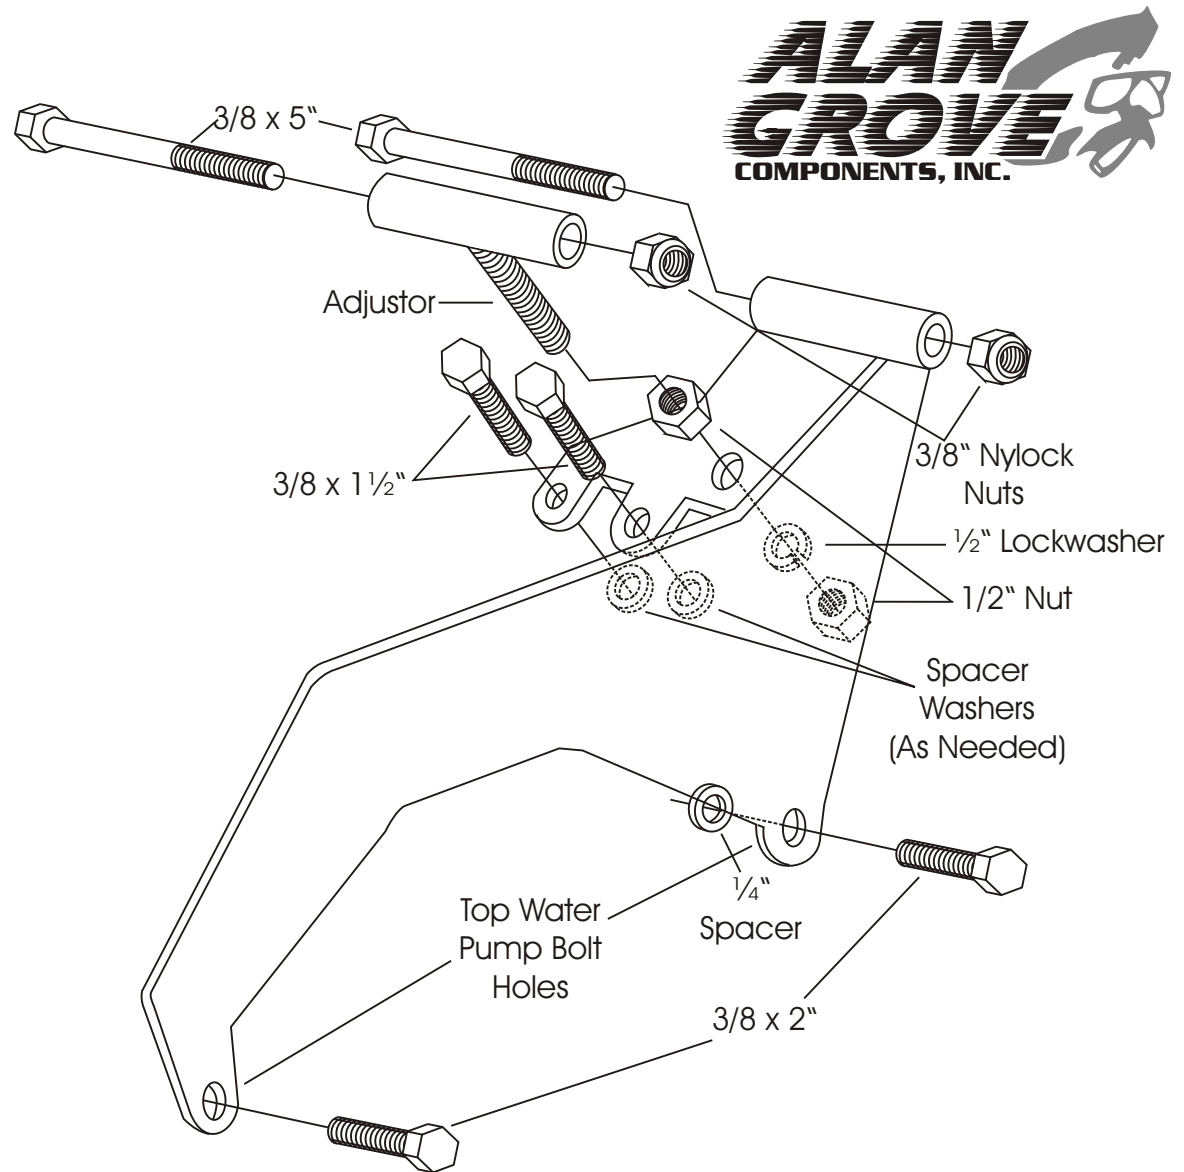

As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.

A.C.
COMPRESSOR
MOUNT
100L

Small Block Chevy - Short Water Pump
Driver's Side

ALAN GROVE COMPONENTS, INC.
27070 METCALF ROAD
LOUISBURG, KS 66053