

SPECIALTY POWER WINDOWS 1964-67 MID SIZE GM

INSTRUCTIONS

FRONT UNITS:

Roll the manual window all the way up and remove the window crank handle.

Remove roller channel from inner door panel.

Remove roller channel from bottom of glass.

Remove the door glass by pulling it to the rear and up.

Remove the two screws, two nuts and bolts from the vent assembly. Move it up and out of the way.

Remove the manual regulator through the access hole.

Drill holes in the door jamb and hinge pillar for the rubber conduits.

Install the power regulator. It will bolt into the original holes. Using the test lead provided run the regulator up so that you can access the rollers through the access hole. Place one lead to +12vdc and one lead to ground. Reverse this for the opposite direction. Place the roller channel onto the rollers.

Replace the front vent assembly.

Replace the rear glass guide and the front and rear stops.

REAR UNITS:

Place window in down position.

Remove crank handle.

Remove the nuts from the top vertical channel. Loosen the bottom.

Remove the mounting bolts from the manual regulator.

Remove the regulator. Replace the glass. Attach to roller channel. Make sure glass is in front and rear channels.


Replace the inner door panel roller channel. Slide onto roller and run unit to align channel with inner panel mounting holes.

Slide regulator roller out of channel on glass and remove the unit from the quarter.

Run new power regulator to the down position. Install regulator and slide roller into channel. Bolt the unit into the original holes but do not tighten.

Reinstall vertical channel.

Power the unit to the up position and tighten all bolts and nuts.

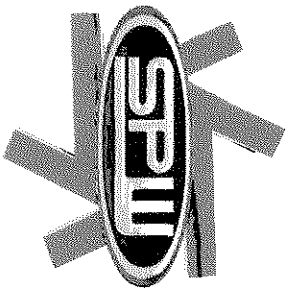

Specialty Power Windows

Rubber Conduit Instructions

