



STAN'S DART REFILL INSTRUCTIONS

IMPORTANT NOTE:


The DART is designed to work with all Stan's sealants. A latex-based sealant is required for proper function. To ensure maximum sealing capability, additional Stan's sealant may be added to the tire before DART installation.

WARNING:

Keep out of reach of children.


1

Open DART refill container and remove rack of fresh DARTs.

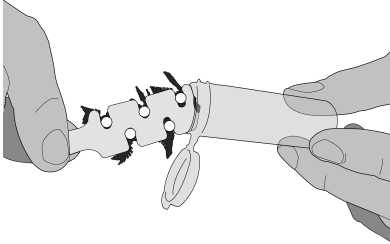


2

On your DART tool, locate the empty chamber that requires a refill and remove the clear cap.

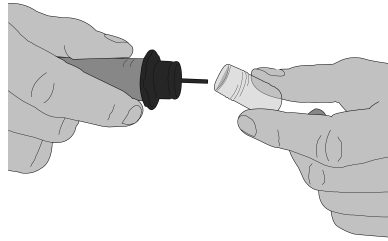


3

Insert the carbon rod of the DART tool into the back of the plastic tip of the fresh DART while applying light finger pressure to the tip of the DART.

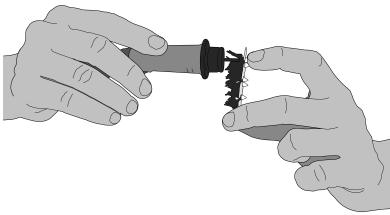

4


Slide new DART out of slot in refill rack.

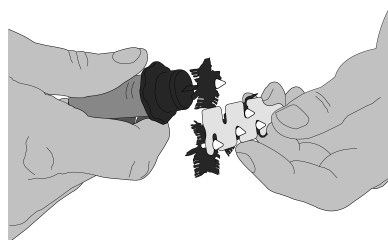

5

Insert rack back into refill container.

Note - To preserve effectiveness of DARTs, ensure container lid is completely closed.

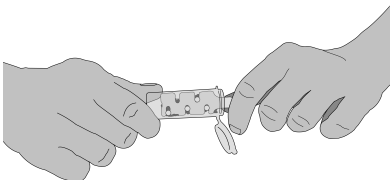

6

Reinstall the clear cap on your DART Tool.

