


INSTRUCTION MANUAL HUBEN SPEEDLOADER

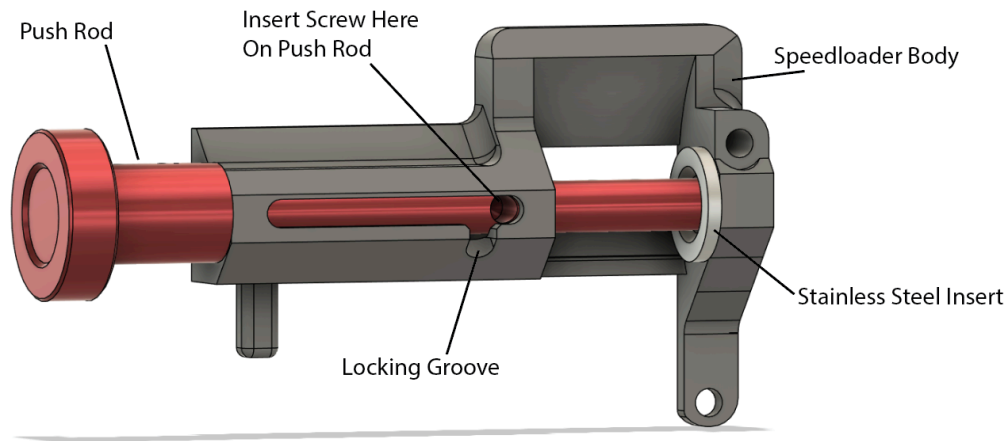

1. Remove Huben K1 loading gate by removing stock and removing screws
2. Insert one of the screws from the loading gate into the speedloader push rod threaded hole, and tighten enough that the screw will click solidly in place of the locking groove on the speedloader body
3. Line up provided template below onto the stock of the Huben k1
4. Cut away the material of the stock in the shaded region
5. Use the remaining screw from the loading gate, as well as the provided screw to attach the speedloader in place of the loading gate

Installation Template (top-down view of back of stock, Scale 1:1)

