



Certificate of Analysis

Mar 16, 2020 | Green Roads

601 Fairway Drive Deerfield Beach
Florida, United States 33441


Sample: DA00311008-005

Harvest/Lot ID: B07W01

Seed to Sale #N/A

Batch Date :N/A

Batch#: BMR0047/19

Sample Size Received: 35.1

Retail Product Size: 30

Ordered : 03/10/20

Sampled : 03/10/20

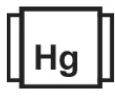
Completed: 03/16/20 Expires: 03/16/21

Sampling Method: SOP Client Method

PASSED

Page 1 of 5

PRODUCT IMAGE SAFETY RESULTS


Pesticides
PASSED

Heavy Metals
PASSED

Microbials
PASSED

Mycotoxins
PASSED

Residuals
Solvents
PASSED

Filtration
PASSED

Water Activity
NOT TESTED

Moisture
NOT TESTED

Terpenes
TESTED

MISC.

CANNABINOID RESULTS



Total THC

0.000%

THC/Container :0.000 mg



Total CBD

2.127%

CBD/Container :804.006 mg



Total Cannabinoids

2.176%

Total Cannabinoids/Container
:822.906 mg

CBC	CBGA	CBG	THCV	D8-THC	CBDV	CBN	CBDA	CBD	D9-THC	THCA
ND	ND	0.037 %	ND	ND	0.013 %	ND	ND	2.127 %	ND	ND
ND	ND	0.370 mg/g	ND	ND	0.130 mg/g	ND	ND	21.270 mg/g	ND	ND
LOD 0.001 %	0.001 %	0.001 %	0.001 %	0.001 %	0.001 %	0.001 %	0.001 %	0.0001 %	0.0001 %	0.001 %



Filtration

PASSED

Analyzed By 584 Weight 1g Extraction date 03/11/20 LOD(ppm) 584 Extracted By 584

Analysis Method -SOP.T.40.013 Batch Date : 03/11/20 10:28:19
Analytical Batch -DA010882FIL Reviewed On - 03/11/20 16:26:36
Instrument Used : Filtration/Foreign Material Microscope

This includes but is not limited to hair, insects, feces, packaging contaminants, and manufacturing waste and by-products. An SH-2B/T Stereo Microscope is used for inspection.

Cannabinoid Profile Test

Analyzed by 450 Weight 3.0461g Extraction date : 03/11/20 11:03:22 Extracted By : 965

Analysis Method -SOP.T.40.020 SOP.T.30.050

Analytical Batch -DA010869POT Instrument Used : DA-LC-003 CBD

Reviewed On - 03/12/20 12:50:25

Batch Date : 03/11/20 08:47:29

Reagent	Dilution	Consums. ID
022720.R11	400	180111
031020.R04		280653964
031020.R03		914C4-914AK
		929C6-929H

Full spectrum cannabinoid analysis utilizing High Performance Liquid Chromatography with UV detection (HPLC-UV). (Method: SOP.T.30.050 for sample prep and Shimadzu High Sensitivity Method SOP.T.40.020 for analysis. LOQ for all cannabinoids is 1 mg/L).

Jorge Segredo
Lab Director

State License # n/a
ISO Accreditation # 97164



Signature

03/16/2020

Signed On



Certificate of Analysis

PASSED

Green Roads

601 Fairway Drive Deerfield Beach
Florida, United States 33441

Telephone: (954) 609-5537

Email: support@greenroads.com

Sample : DA00311008-005

Harvest/LOT ID: B07W01

Batch# : BMR0047/19

Sampled : 03/10/20

Ordered : 03/10/20

Sample Size Received : 35.1

Completed : 03/16/20 **Expires:** 03/16/21

Sample Method : SOP Client Method

Page 2 of 5



Terpenes

TESTED

Terpenes	LOD	Units	Result (%)	Terpenes	LOD	Units	Result (%)
ALPHA-CEDRENE	0.007	%	ND	EUCALYPTOL	0.007	%	ND
ALPHA-HUMULENE	0.007	%	ND	ISOBORNEOL	0.007	%	ND
ALPHA-PINENE	0.007	%	ND	HEXAHYDROTHYMOL	0.007	%	ND
ALPHA-TERPINENE	0.007	%	ND	FENCHYL ALCOHOL	0.007	%	ND
BETA-MYRCENE	0.007	%	ND	3-CARENE	0.007	%	ND
BETA-PINENE	0.007	%	ND	CIS-NEROLIDOL	0.007	%	ND
BORNEOL	0.013	%	ND	ISOPULEGOL	0.007	%	ND
CAMPHENE	0.007	%	ND				
CAMPHOR	0.013	%	ND				
CARYOPHYLLENE OXIDE	0.007	%	ND				
CEDROL	0.007	%	ND				
ALPHA-BISABOLOL	0.007	%	ND				
SABINENE	0.007	%	ND				
SABINENE HYDRATE	0.007	%	ND				
TERPINEOL	0.007	%	ND				
TERPINOLENE	0.007	%	ND				
BETA-CARYOPHYLLENE	0.007	%	ND				
TRANS-NEROLIDOL	0.007	%	ND				
VALENCENE	0.007	%	ND				
PULEGONE	0.007	%	ND				
ALPHA-PHELLANDRENE	0.007	%	ND				
OCIMENE	0.007	%	ND				
NEROL	0.007	%	ND				
LINALOOL	0.007	%	ND				
LIMONENE	0.007	%	ND				
GUAJOL	0.007	%	ND				
GERANYL ACETATE	0.007	%	ND				
GERANIOL	0.007	%	ND				
GAMMA-TERPINENE	0.007	%	ND				
FENCHONE	0.007	%	ND				
FARNESENE	0.007	%	ND				
Total	0						



Terpenes

TESTED

Analyzed by 1351 **Weight** 0.9993g **Extraction date** 03/11/20 10:03:23 **Extracted By** 1351

Analysis Method -SOP.T.40.090
Analytical Batch -DA010862TER **Reviewed On** - 03/12/20 09:31:18
Instrument Used : Liquid Injection GCMS QP2020 (E-SHI-128)
Batch Date : 03/11/20 08:32:45

Reagent	Dilution	Consums. ID
021420.10	10	180111
012120.R13		280653964

Terpenoid profile screening is performed using GC-MS with Liquid Injection (Gas Chromatography - Mass Spectrometer) which can screen 38 terpenes using Method SOP.T.40.091 Terpenoid Analysis Via GC/MS.

Jorge Segredo
Lab Director

State License # n/a
ISO Accreditation # 97164

Signature

03/16/2020

Signed On



Certificate of Analysis

PASSED

Green Roads

601 Fairway Drive Deerfield Beach
Florida, United States 33441

Telephone: (954) 609-5537

Email: support@greenroads.com

Sample : DA00311008-005

Harvest/LOT ID: B07W01

Batch# : BMR0047/19

Sampled : 03/10/20

Ordered : 03/10/20

Sample Size Received : 35.1

Completed : 03/16/20 Expires: 03/16/21

Sample Method : SOP Client Method

Page 3 of 5



Pesticides

PASSED

Pesticides	LOD	Units	Action Level	Result	Pesticides	LOD	Units	Action Level	Result
DIMETHOATE	0.01	ppm	0.1	ND	DIAZANON	0.01	ppm	0.2	ND
CYPERMETHRIN	0.05	ppm	1	ND	MEVINPHOS	0.01	ppm	0.1	ND
CYFLUTHRIN	0.05	ppm	1	ND	MYCLOBUTANIL	0.01	ppm	3	ND
CHLORFENAPYR	0.01	ppm	0.1	ND	NALED	0.01	ppm	0.5	ND
METHYL PARATHION	0.005	ppm	0.1	ND	OXAMYL	0.01	ppm	0.5	ND
CAPTAN	0.07	ppm	3	ND	PACLOBUTRAZOL	0.01	ppm	0.1	ND
ABAMECTIN B1A	0.02	ppm	0.3	ND	PHOSMET	0.01	ppm	0.2	ND
ACEPHATE	0.001	ppm	3	ND	PIPERONYL BUTOXIDE	0.01	ppm	3	ND
DICHLORVOS	0.05	ppm	0.1	ND	PRALLETHRIN	0.05	ppm	0.4	ND
DIMETHOMORPH	0.005	ppm	3	ND	PROPICONAZOLE	0.01	ppm	1	ND
ACEQUINOCYL	0.01	ppm	2	ND	PROPOXUR	0.01	ppm	0.1	ND
ACETAMIPRID	0.01	ppm	3	ND	PYRETHRINS	0.01	ppm	1	ND
ETHOPROPHOS	0.01	ppm	0.1	ND	PYRIDABEN	0.01	ppm	3	ND
ALDICARB	0.02	ppm	0.1	ND	SPINETORAM	0.01	PPM	3	ND
ETOXENPROX	0.01	ppm	0.1	ND	SPIROMESIFEN	0.01	ppm	3	ND
AZOXYSTROBIN	0.01	ppm	3	ND	SPIROTETRAMAT	0.02	ppm	3	ND
ETOXAZOLE	0.01	ppm	1.5	ND	SPIROXAMINE	0.01	ppm	0.1	ND
BIFENAZATE	0.01	ppm	3	ND	TEBUCONAZOLE	0.01	ppm	1	ND
FENHEXAMID	0.01	ppm	3	ND	THIACLOPRID	0.01	ppm	0.1	ND
FENOXYCARB	0.01	ppm	0.1	ND	THIAMETHOXAM	0.01	ppm	1	ND
BIFENTHRIN	0.01	ppm	0.5	ND	TOTAL CONTAMINANT LOAD (PESTICIDES)	0.1	ppm	20	ND
BOSCALID	0.01	PPM	3	ND	TOTAL PERMETHRIN	1	ppm	1	ND
FENPYROXIMATE	0.01	ppm	2	ND	TOTAL SPINOSAD	1	ppm	3	ND
CARBARYL	0.01	ppm	0.5	ND	TRIFLOXYSTROBIN	0.01	ppm	3	ND
FIPRONIL	0.02	ppm	0.1	ND					
FLONICAMID	0.01	ppm	2	ND					
CARBOFURAN	0.01	ppm	0.1	ND					
CHLORANTRANILIPROLE	0.01	ppm	3	ND					
FLUDIOXONIL	0.01	ppm	3	ND					
HEXYTHIAZOX	0.01	ppm	2	ND					
IMAZALIL	0.01	ppm	0.1	ND					
IMIDACLOPRID	0.01	ppm	3	ND					
CHLORPYRIFOS	0.01	ppm	0.1	ND					
KRESOXIM-METHYL	0.01	ppm	1	ND					
MALATHION	0.01	ppm	2	ND					
CLOFENTEZINE	0.01	ppm	0.5	ND					
METALAXYL	0.01	ppm	3	ND					
COUMAPHOS	0.005	ppm	0.1	ND					
METHIOCARB	0.01	ppm	0.1	ND					
METHOMYL	0.01	ppm	0.1	ND					
DAMINOZIDE	0.02	ppm	0.1	ND					

<div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div></div>	Pesticides			PASSED
Analyzed by 585	Weight 1.0430g	Extraction date 03/11/20 12:03:32	Extracted By 1082	
Analysis Method - SOP.T.30.065, SOP.T.40.065, SOP.T.40.060, SOP.T.40.070 and SOP.T.40.090 , SOP.T.30.065, SOP.T.40.065, SOP.T.40.060 and SOP.T.40.090				
Analytical Batch - DA010876PES		Reviewed On- 03/11/20 16:26:36		
Instrument Used : DA-LCMS-001_DER				
Batch Date : 03/11/20 09:35:42				
Reagent	Dilution	Consums. ID		
0131120.30	10	180111		
030920.814		280653964		
030920.815				
Pesticide screen is performed using LC-MS which can screen down to below single digit ppb concentrations for regulated Pesticides. Currently we analyze for 67 Pesticides. (Method: SOP.T.30.060 Sample Preparation for Pesticides Analysis via LCMSMS and SOP.T.40.060 Procedure for Pesticide Quantification Using LCMS). Volatile Pesticides may be tested with GCMSMS under SOP.T.40.070 and SOP.T.40.090. * Pesticide screen is performed using GC-MS which can screen down to below single digit ppb concentrations for regulated Pesticides. Currently we analyze for 2 Volatile Pesticides. (Method: SOP.T.30.060 Sample Preparation for Pesticides Analysis via LCMSMS and SOP.T.40.090 Volatile Pesticides Analysis by GC-MS/MS)				



Certificate of Analysis

PASSED

Green Roads

601 Fairway Drive Deerfield Beach
Florida, United States 33441

Telephone: (954) 609-5537

Email: support@greenroads.com

Sample : DA00311008-005

Harvest/LOT ID: B07W01

Batch# : BMR0047/19

Sampled : 03/10/20

Ordered : 03/10/20

Sample Size Received : 35.1

Completed : 03/16/20 **Expires:** 03/16/21

Sample Method : SOP Client Method

Page 4 of 5

	Residual Solvents	PASSED
--	--------------------------	---------------

Solvent	LOD	Units	Action Level (PPM)	Pass/Fail	Result
1,1-DICHLOROETHENE	1	ppm	8	PASS	ND
1,2-DICHLOROETHANE	0.18	ppm	2	PASS	ND
2-PROPANOL	45	ppm	500	PASS	ND
ACETONE	67.5	ppm	750	PASS	ND
ACETONITRILE	5.4	ppm	60	PASS	ND
BENZENE	0.09	ppm	1	PASS	ND
BUTANES (N-BUTANE)	96	ppm	5000	PASS	ND
CHLOROFORM	0.18	ppm	2	PASS	ND
DICHLOROMETHANE	3.75	ppm	125	PASS	ND
ETHANOL	90	ppm	1000000	PASS	3332.300
ETHYL ACETATE	36	ppm	400	PASS	ND
ETHYL ETHER	45	ppm	500	PASS	ND
ETHYLENE OXIDE	0.6	ppm	5	PASS	ND
HEPTANE	45	ppm	5000	PASS	ND
METHANOL	22.5	ppm	250	PASS	ND
N-HEXANE	4.5	ppm	250	PASS	ND
PENTANES (N-PENTANE)	67.5	ppm	750	PASS	ND
PROPANE	120	ppm	5000	PASS	ND
TOLUENE	13.5	ppm	150	PASS	ND
TOTAL XYLENES	13.5	ppm	150	PASS	ND
TRICHLOROETHYLENE	2.25	ppm	25	PASS	ND

	Residual Solvents	PASSED
--	--------------------------	---------------

Analyzed by 850 **Weight** 0.0225g **Extraction date** 03/11/20 03:03:16 **Extracted By** 850

Analysis Method -SOP.T.40.032

Analytical Batch -DA010893SOL

Reviewed On - 03/12/20 14:45:49

Instrument Used : Headspace GCMS

Batch Date : 03/11/20 14:27:03

Reagent	Dilution	Consums. ID
	1	00279984 161291-1 24154107

Residual solvents screening is performed using GC-MS which can detect below single digit ppm concentrations. Currently we analyze for 21 Residual solvents.(Method: SOP.T.30.032 Residual Solvents Analysis via GC-MS).



Certificate of Analysis

PASSED

Green Roads

601 Fairway Drive Deerfield Beach
Florida, United States 33441

Telephone: (954) 609-5537

Email: support@greenroads.com

Sample : DA00311008-005

Harvest/LOT ID: B07W01

Batch# : BMR0047/19

Sampled : 03/10/20

Ordered : 03/10/20

Sample Size Received : 35.1

Completed : 03/16/20 Expires: 03/16/21

Sample Method : SOP Client Method

Page 5 of 5

	Mycotoxins	PASSED
--	-------------------	---------------

Analyte	LOD	Units	Result	Action Level (PPM)
AFLATOXIN G2	0.002	ppm	ND	0.02
AFLATOXIN G1	0.002	ppm	ND	0.02
AFLATOXIN B2	0.002	ppm	ND	0.02
AFLATOXIN B1	0.002	ppm	ND	0.02
OCHRATOXIN A+	0.002	ppm	ND	0.02

Analysis Method -SOP.T.30.065, SOP.T.40.065

Analytical Batch -DA010877 | Reviewed On - 03/16/20 12:22:39

Instrument Used : DA-LCMS-001_DER

Batch Date : 03/11/20 09:37:57

Analyzed by	Weight	Extraction date	Extracted By
585	1g	03/11/20 04:03:07	585

Aflatoxins B1, B2, G1, G2, and Ochratoxins A testing using LC-MS. (Method: SOP.T.30.065 for Sample Preparation and SOP.T.40.065 Procedure for Mycotoxins Quantification Using LCMS. LOQ 1.0 ppb). Aflatoxin B1, B2, G1, and G2 must individually be <20ug/Kg. Ochratoxins must be <20ug/Kg.

Reagent	Reagent	Consums. ID
013120.93	013120.164	929C6-929H
013120.109	013120.172	181019-274
021220.61	013120.219	SG298A
122719.70	013120.275	181207119C
020320.59	013120.283	190611634
013120.341		19323
122719.43		23819111
013120.407		104867-12
121719.23		
020320.66		
020320.67		
121719.12		
013120.346		
121719.13		
013120.397		

Microbiological testing for Fungal and Bacterial Identification via Polymerase Chain Reaction (PCR) method consisting of sample DNA amplified via tandem Polymerase Chain Reaction (PCR) as a crude lysate which avoids purification. (Method SOP.T.40.043) If a pathogenic Escherichia Coli, Salmonella, Aspergillus fumigatus, Aspergillus flavus, Aspergillus niger, or Aspergillus terreus is detected in 1g of a sample, the sample fails the microbiological-impurity testing.

	Microbials	PASSED
--	-------------------	---------------

Analyte	Result
ASPERGILLUS_FLAVUS	not present in 1 gram.
ASPERGILLUS_FUMIGATUS	not present in 1 gram.
ASPERGILLUS_NIGER	not present in 1 gram.
ASPERGILLUS_TERREUS	not present in 1 gram.
ESCHERICHIA_COLI_SHIGELLA_SPP	not present in 1 gram.
SALMONELLA_SPECIFIC_GENE	not present in 1 gram.
TOTAL_YEAST_AND_MOLD	<100

Analysis Method -SOP.T.40.043

Analytical Batch -DA010863MIC | Reviewed On - 03/13/20 14:11:30

Instrument Used : PathogenDX PCR_Array Scanner,PathogenDX PCR_DA-010

Batch Date : 03/11/20 08:33:04

Analyzed by	Weight	Extraction date	Extracted By
513	1.0524g	03/11/20 10:03:15	1082

Reagent	Dilution	Consums. ID
082019.48		918C4-918J

	Heavy Metals	PASSED
---	---------------------	---------------

Reagent	Reagent	Dilution
030920.R16	030420.R01	50
031020.R05	031020.R02	
030920.R03	111319.02	
030920.R04		
030420.R03		
030920.R02		

Metal	LOD	Unit	Result	Action Level (PPM)
ARSENIC	0.02	ppm	ND	1.5
CADMIUM	0.02	ppm	ND	0.5
LEAD	0.02	ppm	ND	0.5
MERCURY	0.02	ppm	ND	3

Analyzed by	Weight	Extraction date	Extracted By
53	0.2560g	03/11/20 01:03:31	457

Analysis Method -SOP.T.40.050, SOP.T.30.052

Analytical Batch -DA010871HEA | Reviewed On - 03/12/20 08:12:52

Instrument Used : ICPMS-2030

Batch Date : 03/11/20 08:51:45

Heavy Metals screening is performed using ICP-MS (Inductively Coupled Plasma - Mass Spectrometer) which can screen down to below single digit ppb concentrations for regulated heavy metals using Method SOP.T.30.052 Sample Preparation for Heavy Metals Analysis via ICP-MS and SOP.T.40.050 Heavy Metals Analysis via ICP-MS.